

**Fig. 1  
CHAIN HUNG  
INSTALLATION**

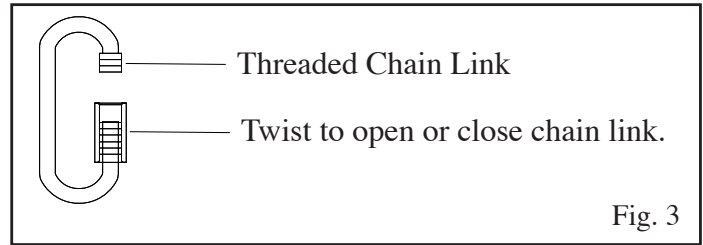


Fig. 3

**IMPORTANT  
TURN OFF POWER AT MAIN FUSE OR CIRCUIT BREAKER  
BOX BEFORE STARTING INSTALLATION**

**Carefully unpack and identify all parts before beginning assembly. Bulb not included.**


1. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.
2. This fixture can be mounted onto ceiling either as chain hung or flush mount:

**CHAIN HUNG INSTALLATION- Fig. 1:**

- A. Take fixture wire (with plastic insulation) and ground wire and thread through rubber washer and fixture loop. Then install loop onto threaded pipe located at top of lantern.
- B. Determine the desired length of chain to hang. Remove any unwanted links with chain pliers.
- C. This fixture is supplied with 2 adjustable chain links. These links are opened and closed by twisting cylinder on chain link. One threaded chain link should be installed onto Fixture loop and the other should be installed onto canopy loop. The standard chain should be installed in between these 2 threaded chain links.
- D. Take ground wire and weave through above chain links, then thread through center hole in canopy loop. Repeat with fixture wire (wire with plastic insulation).

**FLUSH INSTALLATION- Fig. 2:**

- A. Remove and discard canopy loop and threaded pipe from fixture plate.
  - B. Slip fixture plate, lock washer, and hex nut through fixture wires and ground wire. Then install them onto threaded pipe by fastening securely with hex nut.
3. Cut excess wires leaving only 6" (15cm) length of wires above fixture plate. Split fixture wire into two strands. Then strip off 3/4" (19mm) of outer plastic insulation.
  4. Follow enclosed "Fixture Installation Instructions" for electrical and fixture installation onto ceiling outlet box.

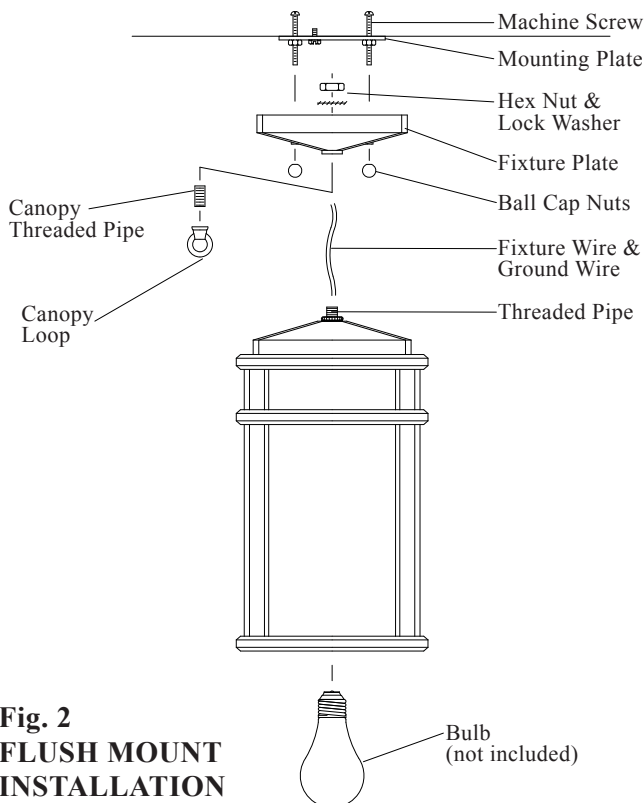

**Fig. 2  
FLUSH MOUNT  
INSTALLATION**