

Two-Circuit MonoRail FreeJack Connector



GENERAL PRODUCT INFORMATION:




This product is suitable for indoor dry locations only.


This product should be used with Tech Lighting Two-Circuit MonoRail system only.




Install the FreeJack Connector onto the Two-Circuit MonoRail

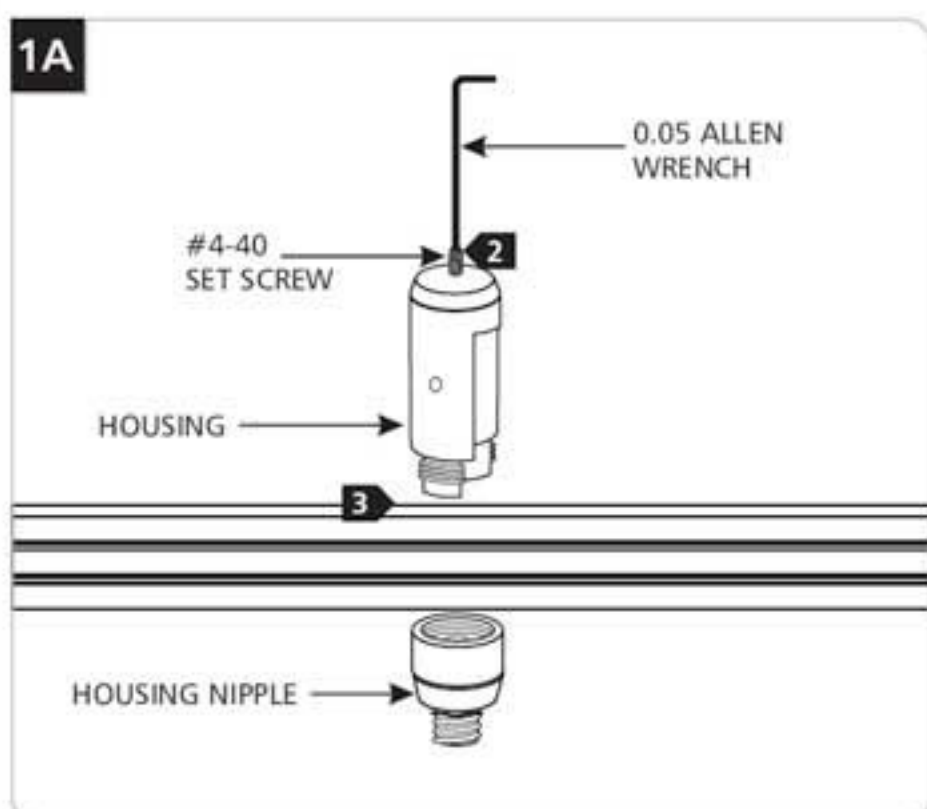


- 1 Turn the power to the Two-Circuit MonoRail off.
- 2 Back out the #4-40 set screw on top of the Two-Circuit MonoRail with the 0.05 Allen wrench.
- 3 Place the housing onto the Two-Circuit MonoRail.

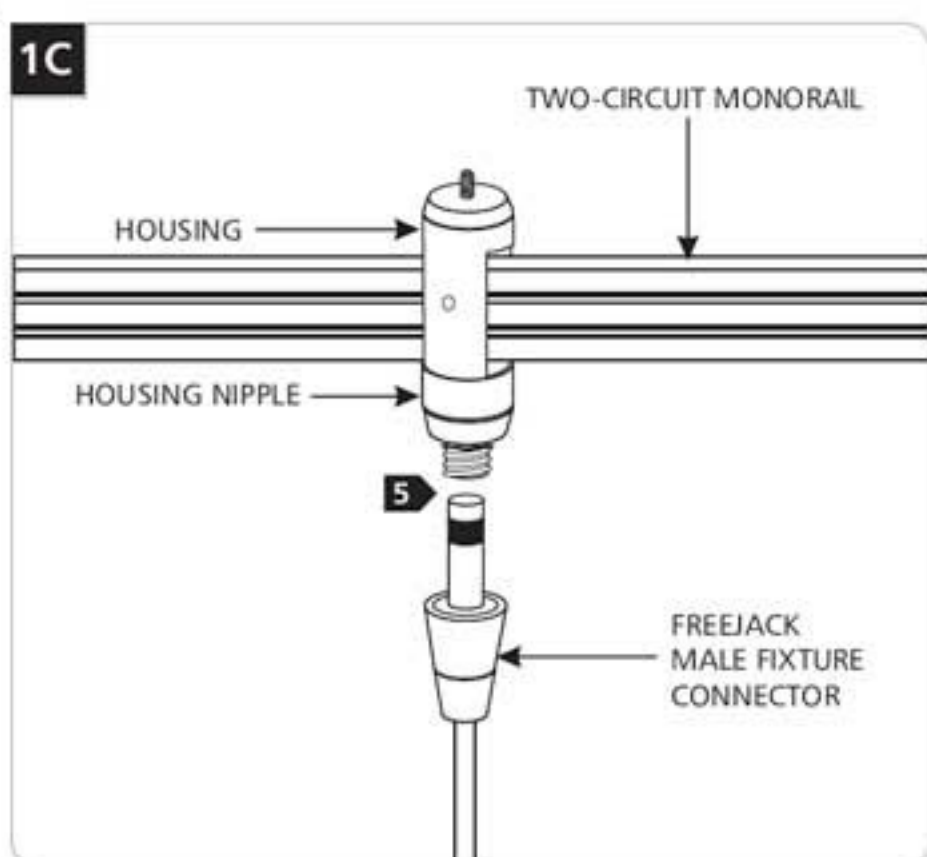


- 5 Screw the FreeJack male fixture connector onto the housing nipple.

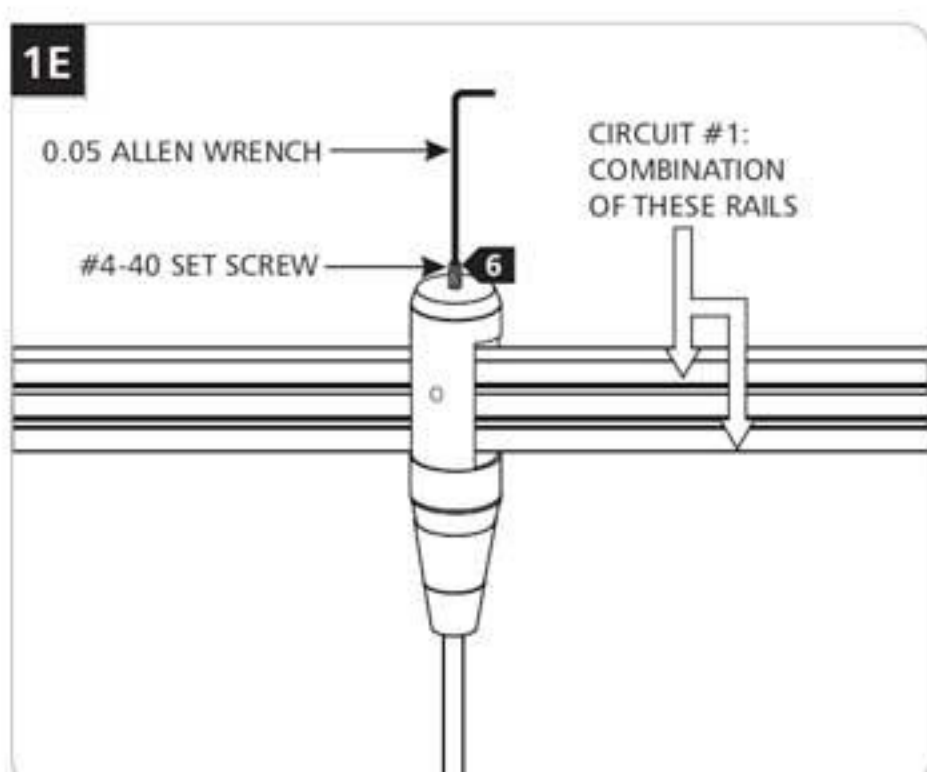

- 6 Select circuit #1 by fastening the #4-40 set screw on top of the housing very tight with the 0.05 Allen wrench.

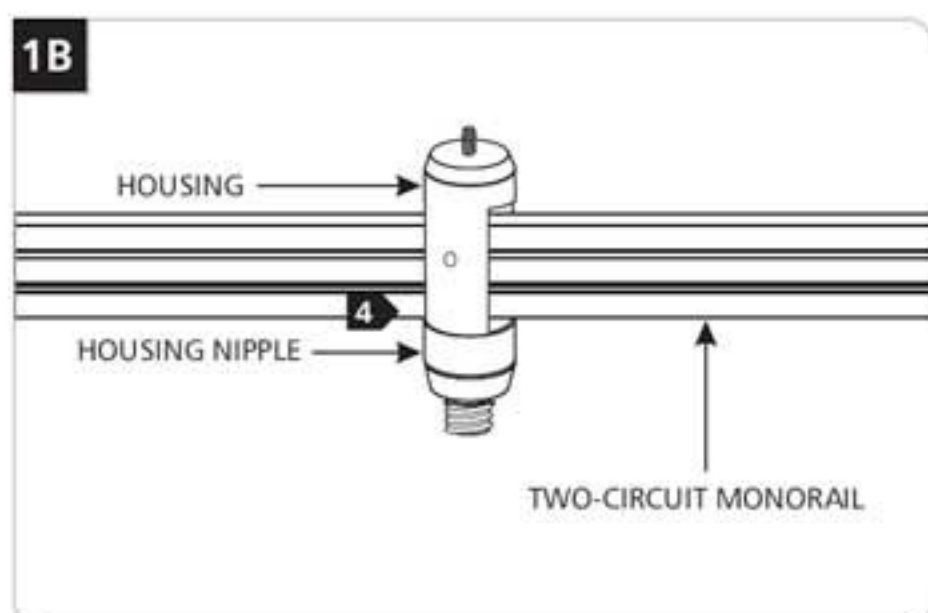

- 4 Screw the housing nipple to the housing tight. Make sure not to cross thread the housing nipple to the housing.

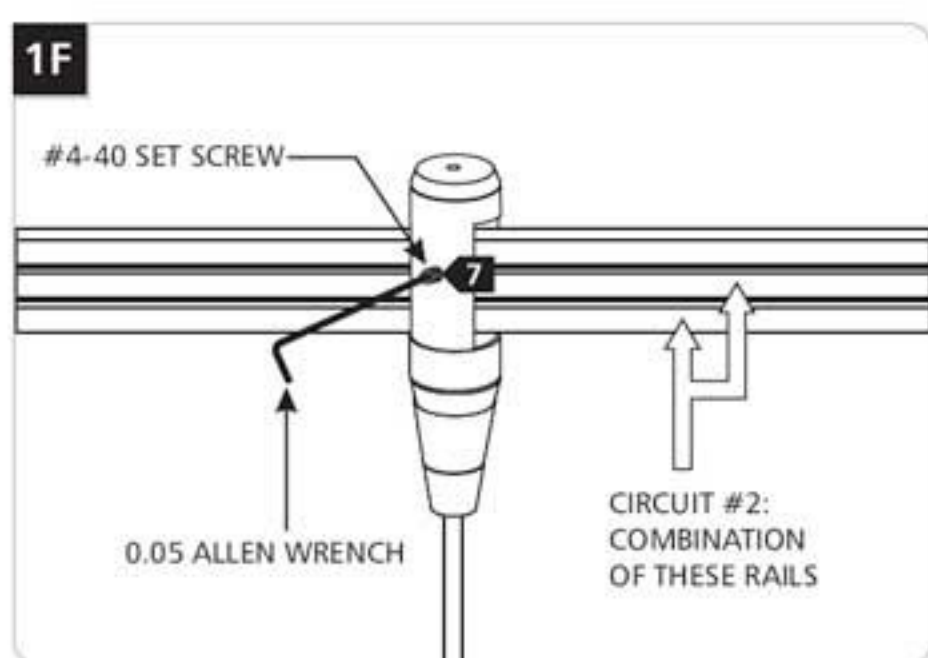

- 7 When using circuit #2, remove the #4-40 set screw from top of the housing and screw it into the side with the 0.05 Allen wrench very tight.

NOTE: Never use more than one set screw to select a circuit on the Two-Circuit MonoRail connector.

NOTE: Do not load either circuit over the maximum system rating.

SAVE THESE INSTRUCTIONS!